

SkyCaddie® BREEZE User Guide



SkyCaddie®
BREEZE™

1.0	GETTING STARTED	3
1.1	SkyCaddie® BREEZE Overview	3
1.1.1	Button Layout	3
1.1.2	Navigation Keys	4
1.1.3	Button Descriptions	4
1.1.4	On-Screen Indicators	6
1.2	System Requirements	6
1.3	Charging Your BREEZE	7
1.4	Power Saving	8
1.5	Using Preloaded Basic Course Trial	8
1.6	Activating and Registering Your BREEZE	8
1.7	Sync Your SkyCaddie BREEZE Using CaddieSync® Express	9
1.8	SkyGolf Memberships Offer Much More Than Just a Better Golf Game	10
2.0	GROUND-MAPPED COURSES FOR YOUR BREEZE	11
2.1	About Course Maps	11
2.2	About Basic Green Courses – Preloaded	12
2.2.1	Limited Course Map Trial	12
2.2.2	Using Preloaded Basic Course Trial	12
2.3	Searching and Downloading Courses To Your BREEZE	13
3.0	PLAYING GOLF WITH YOUR BREEZE	14
3.1	Acquiring Signals	14
3.2	Selecting a Course to Play	14
3.3	Manually Selecting a Basic Green Course - Preloaded:	15
3.4	Big Number and Center Only	16
3.5	Determining Shot Distance Using Mark Ball	16
3.6	Viewing Course Information	17
3.7	Digital Scorecard	17
3.7.1	Turning on the Scoring Feature	17
3.7.2	Using the Scoring Feature During Play	18
3.7.3	Viewing the Digital Scorecard	20
3.7.4	Setting Your Handicap or MyPar™ Target	21
3.7.5	Optional Scoring Information	22
3.7.6	Reviewing Saved Rounds	23
3.8	AutoView Technology	23
4.0	SKYCADDIE MENU ITEMS	26
4.1	Main Menu	26
4.2	Settings Menu	27
4.2.1	Options	28
4.2.2	Info	30
4.2.3	Scoring	31
4.2.4	System	31
4.2.5	GPS	31

4.2.6	Test	32
4.2.7	About Advanced Feature Courses	33
5.0	BREEZE FEATURE PACKS – RAISE YOUR GAME TO ANOTHER LEVEL	34
5.1	Overview of Advanced Course Management Features	34
5.2	BREEZE Feature Pack 1	34
5.2.1	BREEZE Feature Pack 1 Includes	34
5.2.1.1	Target Lists	34
5.2.1.2	Patented IntelliGreen® Technology	36
5.2.1.3	IntelliGreen® Pro	36
5.3	BREEZE Feature Pack 2	37
5.3.1	BREEZE Feature Pack 2 Includes	37
5.3.1.1	Interactive HoleVue™ With Patented Auto Zoom	37
5.3.1.2	QuickVue™	38
5.4	BREEZE Feature Pack 3	39
5.4.1	BREEZE Feature Pack 3 Includes	39
5.4.1.1	Dynamic RangeVue™	39
5.4.1.2	PinPoint™ Technology	39
6.0	RECORDING YOUR OWN COURSE	40
6.1	Naming Personal SkyCaddie Courses	40
6.2	Recording Green Targets	40
6.3	Setting Par and Handicap	40
6.4	Playing Personal SkyCaddie Courses	40
6.5	Re-Recording Personal SkyCaddie Courses	40
6.6	Renaming or Deleting Personal SkyCaddie Courses	41
7.0	APPENDIX A - HELPFUL HINTS	42
8.0	APPENDIX B - TARGET ICONS AND TARGET DESCRIPTORS	43
8.1	Target Icons	43
8.2	Target Descriptors	45
9.0	APPENDIX C - BATTERY INFORMATION AND SAFETY REQUIREMENTS	46
U.S. Federal Communications Commission		48
Regulatory Agency Compliance		48

1.0 Getting Started

1.1 SkyCaddie® BREEZE Overview

1.1.1 Button Layout





1.1.2 Navigation Keys

- **Power Button:** Powers the SkyCaddie® BREEZE on and off. To power on the BREEZE, press button until the display turns on. To power off the BREEZE, press the button then select “Yes” with the Right Key.



- **Left and Right Keys:** Selects options displayed above the key on the LCD screen.
- **Joystick:** Quickly and easily navigate through menu items and settings, screen features, and crosshairs on a HoleVue/IntelliGreen/IntelliGreen Pro graphic. The joystick is multi-directional and can select options by pressing the button. You can also press the Left and Right Keys to select on-screen options.

Multi-directional Joystick allows for smooth on-screen movement.

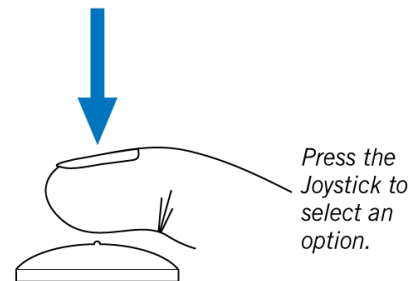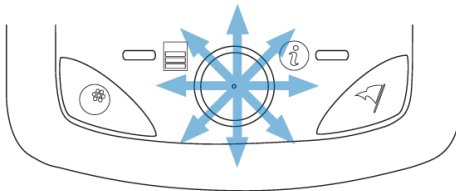


1.1.3 Button Descriptions

- **Info:** When not in Play or Demo mode, pressing the Info button displays BREEZE information: your name, your phone number, the serial number, software version, the version of the basic green data installed, and the version of the SkyCaddie® operating system.


During Play or Demo mode, the Info button is used to turn the RangeVue™ feature on and off by pressing once for ON and again for OFF. RangeVue™ is part of Feature Pack 3 upgrade for the BREEZE and is discussed later in this document.

Pressing the Info button during Play or Demo Mode displays the course name, contact information, hole in play, and the hole's par and handicap.


- **Menu:** The Menu button is used to display the SkyCaddie's Main Menu while powered on.

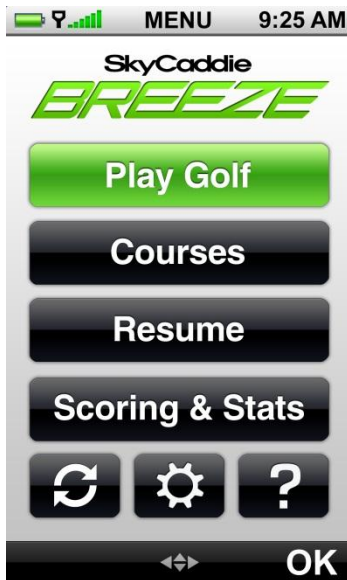

- **Hole:** During play, press the Hole button to manually advance to a different hole than the one you are on. If Auto-Hole Advance is turned on, you will not need to press this button to go to the next hole, since the BREEZE will know to change holes automatically. Choose to select that hole or advance to a different hole by scrolling through the list of holes using the Joystick. Select "OK" with the Right Key to select the hole.

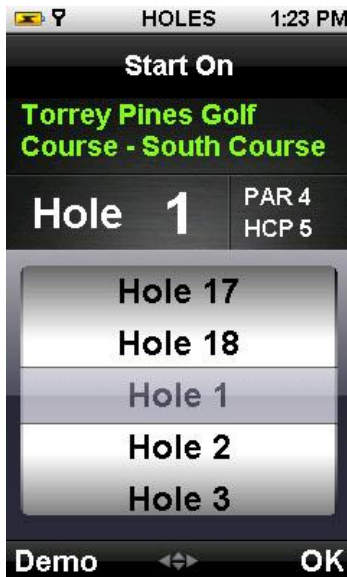

- **Mark Ball:** The BREEZE's Mark Ball feature calculates your shot distance. This feature is useful in determining how far you typically hit each club in your bag, leading to better club selections and an overall improvement in course management. To use, press the Mark Ball Button, then select "Mark" with the Right Key before taking your shot. Press the Mark button again when you get to the location where your ball landed. The shot distance will be displayed. Mark Ball is also discussed in more detail later in this guide.

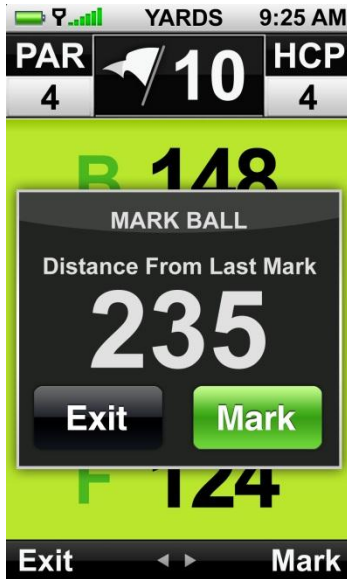

1.1.4 On-Screen Indicators

- **Battery Gauge:** Displays the remaining battery level.
- **Digital Clock:** Displays the current time based on the signal that the BREEZE receives from the satellites.
- **Satellite Signal Indicator:** Shows real-time GPS satellite signal strength. The plus sign (+) above the signal bars indicates that SBAS (Satellite-Based Augmentation System) has been acquired. This is the preferred signal level for optimal performance.

1.2 System Requirements

Before registering and activating your BREEZE with SkyGolf using CaddieSync™ Express software, please make sure your computer meets the minimum system requirements:

- PC with Windows® XP / Vista / 7 (32- or 64-bit)
- Mac OS® 10.6 or higher, Intel® processor
- 512 MB of RAM (1 GB of RAM recommended)
- 100 MB of available hard disk space
- Available USB 1.1 or 2.0 port
- Internet access (High-speed recommended)
- Microsoft® Internet Explorer® 9.0, FireFox®, Safari®, Chrome

1.3 Charging Your BREEZE

To ensure that your SkyCaddie® is fully charged and ready to play, always charge your BREEZE using a wall outlet. We recommend charging the BREEZE each time before playing a round. If the battery level is low, a full recharge may take 4 to 6 hours.



Charging Your BREEZE Using a Wall Outlet

- 1 Gently pull back the rubber cover located on the upper left side of the BREEZE to gain access to the micro-USB port. Using the cable included in the box, insert the micro-USB connector into the port.
- 2 Take the USB end of the cable and insert it into the power adapter that is included in the box.
- 3 Plug the power adapter into an open outlet.
- 4 The BREEZE's display will turn on and display the Sync screen. Select "Charge" using the Right Key to display the Battery Charging screen and to begin charging the BREEZE. After 10 seconds, this screen will fade out and the device will be in a hibernation mode while it is charging. Remain on the Battery Charging screen while charging. When fully charged, the BREEZE will power off.

IMPORTANT!

When charging the BREEZE, please use a wall outlet instead of your computer. DO NOT power the BREEZE off while it is charging. Please keep the device ON and on the Charging screen - it will automatically power off when charging is complete.

1.4 Power Saving

Your SkyCaddie BREEZE is a powerful mobile GPS device. In order to make the most of each battery charge, the software on the BREEZE includes Power Saving features to preserve battery life during times when it is inactive. After a short period of time, if the BREEZE is inactive, the display's backlight will automatically turn off. To turn it back on, simply press any key.

Additionally, after 30 minutes of inactivity, the device will automatically shut off by default. You may change the timer setting by going to the Main Menu > Settings > System.

When the BREEZE was shipped, the backlight setting was set to 60% brightness. For most players, this brightness setting will be optimal. However, if you wish to change the brightness settings, go to the Main Menu > Settings > Options.

1.5 Using Preloaded Basic Course Trial

Your BREEZE comes preloaded with basic green information (front, center, back distances) for up to 30,000 of our ground-verified courses for 30 days.

Your complimentary 30-day trial period begins from date of purchase. On Day 31, you will need to purchase a SkyCaddie® Membership plan in order to continue playing with the Basic Green course.

Selecting a Basic Green Course Map

- 1 On the Main Menu, select "Courses".
- 2 Select "Search Courses" from the Course Selection list.
- 3 Follow the on-screen options to select your region, state, and course name.
- 4 Once you've selected a course, select "Play Now".
- 5 Select the hole you are on, then press the Right Key under "OK" to start.

1.6 Activating and Registering Your BREEZE

Activating Your BREEZE using the Access Code

- 1 Turn on your SkyCaddie® BREEZE.
- 2 On your BREEZE, go to the Main Menu and select the SYNC icon in the lower left corner.
- 3 Your Access Code will display in a green box.
- 4 Visit www.MySkyCaddie.com and enter your Access Code before clicking "Activate my SkyCaddie®".
- 5 Next, complete the process for registering your BREEZE, select a Membership, and SYNC your device so that it is ready to play!

Activating Your BREEZE using the USB Cable

- 1 Connect the micro-USB end of the cable to the SkyCaddie® and the USB end to your computer.
- 2 Click the “Sync” button in the upper right corner of www.skygolf.com to start the communication process. CaddieSync® Express, which is used to communicate between your SkyCaddie® and SkyGolf.com, will be installed on your computer (if it is not already). Follow the simple onscreen steps to complete installation.
- 3 CaddieSync® Express will return a message instructing you to register your SkyCaddie. From that screen, click “Register Now” to start the process. The application will prompt you to create a login and password (If you already have created an account, enter that login and password).

1.7 Sync Your SkyCaddie BREEZE Using CaddieSync® Express

CaddieSync® Express allows your BREEZE to communicate with SkyGolf.com through a process called *syncing*. It is used to register your BREEZE, add BREEZE feature packs, search for Advanced Featured Course maps from our online library, upload your round data to ClubSG, personalize your BREEZE software, receive course map updates and receive software maintenance updates.

IMPORTANT!

The previous SkyCaddie® desktop software, CaddieSync®, is NOT compatible with the SkyCaddie® BREEZE. You will need to install CaddieSync® Express to allow communication with the BREEZE.

Note

You can browse the Course Map library anytime through the public area of www.SkyGolf.com. However, in order to obtain the courses for use with your BREEZE, you MUST have a Membership Plan to download them.

To install the latest version of CaddieSync® Express onto your computer:

- 1 Using a computer with Internet connection, launch a web browser and type the following address in the address field: <http://www.myskycaddie.com>
- 2 Click the “Sync” button to initiate the installation process.
- 3 Follow the simple onscreen instructions to complete installation.

After CaddieSync® Express is successfully installed, you can simply click on the “Sync” button at the upper right-hand corner of the SkyGolf.com website to sync your BREEZE with your SkyGolf® account.

Note

The preloaded course maps on your SkyCaddie will no longer be accessible after the 30 Day Trial Period if you select the Register Only Membership Plan option during registration at MySkyCaddie.com. The Register Only Membership Plan is intended for SkyGolf Members who want to access courses they have mapped themselves only. To gain access to SkyGolf's TrueGround Map course library with front, center, and back distances, you will need to select one of the other SkyGolf Membership Plans based on your desired area of coverage.

1.8 SkyGolf Memberships Offer Much More Than Just a Better Golf Game

You should expect the best in a rangefinder, and SkyCaddie® believes your game is worth it. That's why we invest thousands of man-hours and millions of dollars every year to train, equip, send out and support our worldwide network of experienced SkyCaddie® Mappers. We're moving beyond rangefinders to become the ultimate destination for golf knowledge, connecting you to *your game, your equipment, your course, your PGA Teaching Professional, and other golfers.*

During registration, you'll be given the option to select an annual Membership plan, providing you with a host of benefits and value. You can significantly increase the value of your SkyCaddie with these member benefits.

Access to over 30,000 error-corrected maps you can trust

- Only SkyGolf spends the time and money to map its own courses
- Only SkyGolf eliminates known errors contained in other map libraries

ClubSG, Golf's fastest growing online community

- Store scores and track key stats
- Analyze your strengths and weaknesses
- Discover if your equipment is helping or hurting your game
- Share your successes with other golfers

Save 3x the nominal cost of memberships with SkyRewards

- Earn money-saving SkyRewards Points
- Receive exclusive discounts and offers from SkyGolf partners
- Save money on great products and services that more than cover the expense of your annual SkyGolf Membership

The screenshot displays the SkyCaddie website's ClubSG section. The top navigation bar includes links for PRODUCTS, MEMBERSHIP, COURSES, CLUB SG (highlighted), SUPPORT, ONLINE STORE, and SKYREWARDS STORE. Below this is a secondary navigation bar with DASHBOARD, SCORES, STATS, FRIENDS, GROUPS, EQUIPMENT, TOURNAMENTS, FORUMS, and BLOG. The main content area is divided into several sections: 'Your Links' on the left with icons for SKYCADDIE, BAG, ROUNDS, SKYREWARDS, SWING LABS, SKYCADDIE.TV, and SKYGOLF NEWS; a central 'WELCOME TO THE SKYGOLF CLUBHOUSE' section with a list of features like 'Sync the Digital Scorecard from SkyCaddie' and 'Track Golf Stats & Analyze Your Game'; a 'Not a SkyCaddie Member?' prompt; a 'Download Courses' and 'Renew Your SkyCaddie' section; a 'Daily Links' section with a '2012 World Am Wrap Up' article; a 'The Wedge Guy' section with an 'Analyzing Your Iron Play' article; a 'Popular Forums' section with topics like 'Planters Fertilizers' and 'What is the lowest temperature...'; and a 'Week's Best Scores' section featuring a table of top performers.

User	Course	Score
KT61	Mantland GC	-36.6
Scorpionjack52	Woodlawn GC	-34.2
bruce1959	Hylands GC	-26.7
poetee	Avondale GC	-25.2
poetee	Avondale GC	-25.2


ClubSG™

ClubSG.SkyGolf.com

2.0 Ground-Mapped Courses For Your BREEZE

2.1 About Course Maps

Your SkyCaddie® BREEZE requires the use of maps to provide distance information on the device (also known as *SkyCourses*®). SkyCaddie uses the only method that Tour caddies use to provide distances to their Pros: *we walk the course*. With a course library approaching 30,000 maps, SkyCaddie maintains the largest ground-mapped course database in the world. No one else uses this method, because it is very expensive in terms of labor and money. But SkyCaddie invests thousands of man-hours and millions of dollars every year to maintain our ground-mapped course library because we believe your game is worth it. Our members trust the information that their SkyCaddie provides them, which is why SkyCaddie has remained the leader in this technology for the last 10 years.

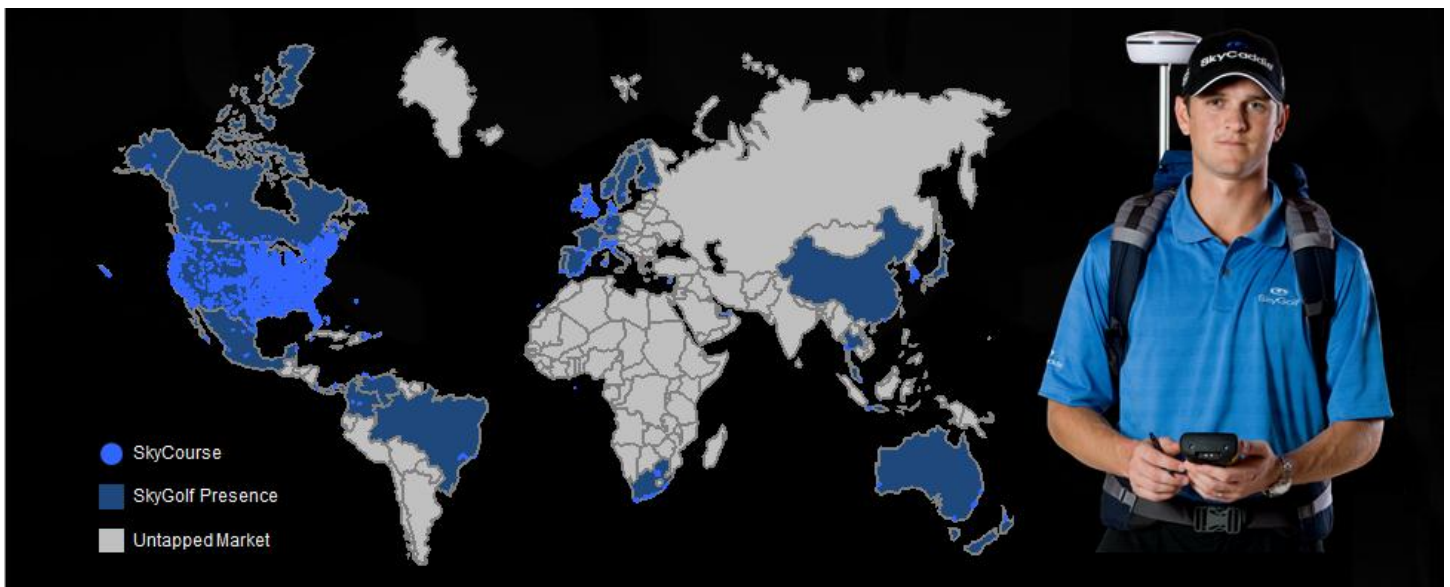


Our course map library is growing daily. Whenever we receive a notification that a course layout has changed, we send a mapper out to re-map the course, so that our members have the most up-to-date distance information in the game. We update thousands of courses a month.

The BREEZE is capable of storing and using two types of professionally-mapped courses: 1) Basic Green course maps (also referred to as “preloaded courses”) and 2) Advanced Feature course maps.

2.2 About Basic Green Courses – Preloaded

The BREEZE comes preloaded with Basic Green information (front, center, back distances) for up to 30,000 of our ground-verified courses for 30 days. This allows it to be ready-to-play out of the box.

The 30-Day trial period begins from date of purchase. On Day 31, your BREEZE will only display the benefits that correspond to the membership plan you purchased. Should you choose one of our BREEZE membership plans, you will receive the Basic Green information related to the plan you selected only for the region you specified.

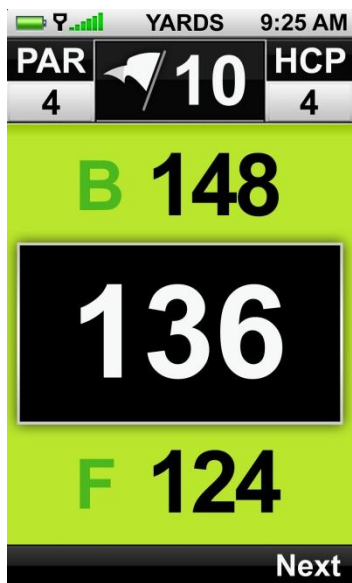

During the preload trial period, the scoring and mark ball features are available. The BREEZE will store scorecards for up to 20 rounds.

2.2.1 Limited Course Map Trial

Your SkyCaddie *BREEZE* includes a limited-time course map trial, so that you can start playing with the SkyCaddie out of the box. The limited trial period begins from the date of purchase; after the trial period, you will need to complete the registration process and sign up for a SkyCaddie® Membership plan that best suits your needs to continue playing with the course maps. You may use one of the Basic Green course maps that are preloaded on the device (which provide front, center, and back of each green).

2.2.2 Using Preloaded Basic Course Trial

Your *BREEZE* comes preloaded with basic green information (front, center, back distances) for up to 30,000 of our ground-verified courses for 30 days. Your complimentary 30-day trial period begins from date of purchase. On Day 31, you will need to purchase a SkyCaddie® Membership plan in order to continue playing with the Basic Green course or an advanced feature course.

2.3 Searching and Downloading Courses To Your BREEZE

Downloading Advanced Feature Course Maps from ClubSG using CaddieSync® Express

Searching for Courses:

- 1 Connect the USB cable to your BREEZE and computer. Then go to www.skygolf.com to sync your device. In the upper right hand corner of the page, click the “SYNC” button to connect to your account.
- 2 Click “Courses” on the top of SkyGolf.com
- 3 Click “Course Search” to open the search page
- 4 Type in the course or facility name and location (state, zip, postal code) and click “Submit”.
- 5 On the Course Search results page, you will see a listing of courses and icons next to each one representing what features are available for that course map.
- 6 To select the course for download, click “Add to My Courses”. This will move the selected course to “Your Courses”. Click the “Your Courses” link to view all courses in your list.

Downloading Courses:



- 1 From within “Your Courses”, choose the courses you want to download by clicking “Select” on the right side of the screen. Your BREEZE can hold up to 50 full-featured course maps at a time.
- 2 When ready, click the course download Button and CaddieSync® Express will download the courses to your BREEZE, replacing any courses that were previously installed.

3.0 Playing Golf With Your BREEZE

3.1 Acquiring Signals

While standing outside prior to play, power on the BREEZE by pressing the center Power button. The BREEZE will power on and display the Main Menu. Using the Joystick, scroll to and highlight “Play Golf” and choose “OK” with the Right Key to begin. The BREEZE will search for satellite signals, keeping you informed of its status using the progress bar.

Once satellite signals have been acquired, the Satellite Signal Indicator will show the signal strength, represented by a series of bars at the top of your screen . The BREEZE will then automatically advance to the course list.

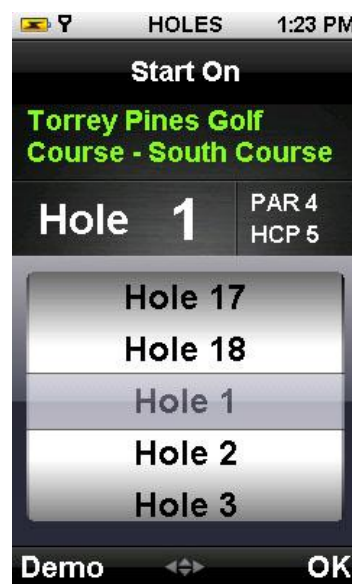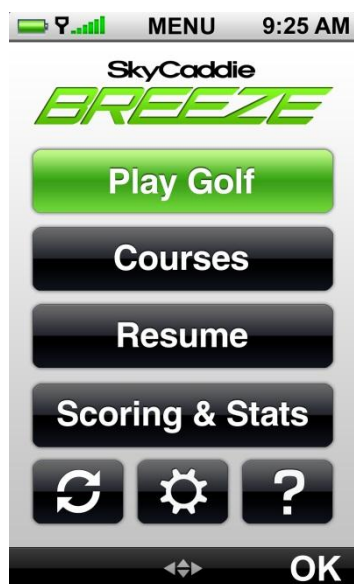

3.2 Selecting a Course to Play

Once the BREEZE has acquired satellite signals, the Auto-Course Select feature will attempt to determine your location and automatically select the closest installed course. In the event that you have a Basic Green (Preloaded) map and an Advanced Feature Course map of the same golf course installed on the BREEZE, the BREEZE will select the Advanced Feature Course by default.

When a course is displayed on the Course Selection screen, either select that course to play, or simply scroll to another course. Courses will be sorted by distance from your current location. “Search Courses...” will let you search for Basic Green courses on the BREEZE. “Nearby Courses...” will tell the BREEZE to auto-search for the closest golf courses from your location and display them.

Once a course has been selected, the BREEZE will ask you for the hole to start on or you may choose to select the Driving Range. If the course you are playing has a driving range that has been mapped by a SkyCaddie Mapper, the Driving Range feature will display the actual distance to each yardage sign based on the location of the hitting area.

3.3 Manually Selecting a Basic Green Course - Preloaded:

- 1 On the Main Menu, select either “Courses” or “Play Golf”
- 2 On the Course Selection screen, scroll to the option that says “Search Courses...” then press the Right Key under “OK”.
- 3 Choose the Region (typically the country) of the golf course’s location by moving the Joystick up/down, then select “OK”.
- 4 Choose the State/Province or other sub-region where the course is located by scrolling up/down, then select “OK”.
- 5 Search for the course by name by scrolling through the list of courses shown on the BREEZE. Once you have discovered the course, press the Right Key under “OK”. The BREEZE will load that course map so you can play using that information.





Did You Know?

A Demo Course has also been preloaded on the BREEZE to allow you to view some of the functionality of the BREEZE through a simulation.

3.4 Big Number and Center Only

Big Number View displays the selected target distance as a very large number for easy viewing. Press up/down on the Joystick to switch between one target at a time.

Center Only displays the distance to the center in a large, big number format. If Center Only is select, it will automatically turn OFF all other targets views. By default, Center Only will be turned OFF.

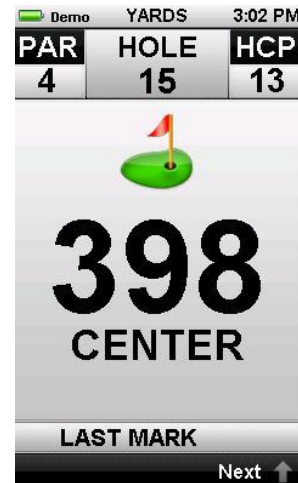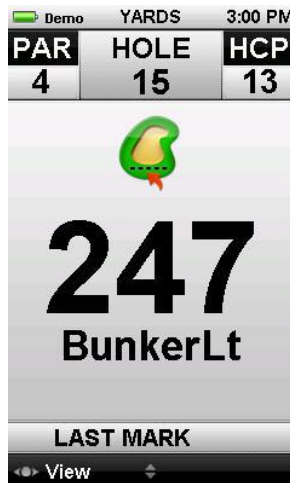

3.5 Determining Shot Distance Using Mark Ball

Simply press the Mark Ball button at the location where you are going to take your shot. The “Mark New Ball Location?” screen will display. Select “Mark” by pressing the Right Key to record your current location and then take your shot.

When you get to the location where your ball came to rest, press the Mark Ball button again to record and display the distance. You may return to your previous screen by selecting “Exit” or choose “Mark” to mark the distance for a shot.



Basic Green Distances

The front, center and back of the green for the hole you are playing show distance calculations based on a line of approach from the center of the fairway. Basic Green distances do not adjust based on a different angle of approach. This is different from IntelliGreen, which rotates the green and recalculates distances from your angle of approach. IntelliGreen is available for the BREEZE through the upgrade in Feature Pack 1.

3.6 Viewing Course Information

To view information regarding the current hole while in Play Mode at any time, simply press the Info button and the hole information appears. The course's name, address, the hole number you are on and the par and handicap for that hole will appear. Press the Right Key under "OK" to exit from this screen.

Note

Preloaded course maps will ONLY show the distances to the front, center, and back of the green. If you wish to see other targets on the hole, or some of the other views as shown on the BREEZE packaging, you will need to download and use an Advanced Feature course map.



3.7 Digital Scorecard

3.7.1 Turning on the Scoring Feature

By default, the Digital Scorecard on the BREEZE is set to OFF.

To turn on the Digital Scorecard from the Main Menu:

- 1 Scroll down to "Settings" using the Joystick, then press the Right Key for "OK"
- 2 Navigate to the *Scoring* icon, then select "OK"

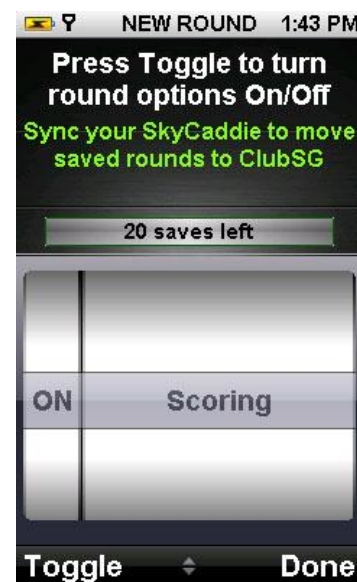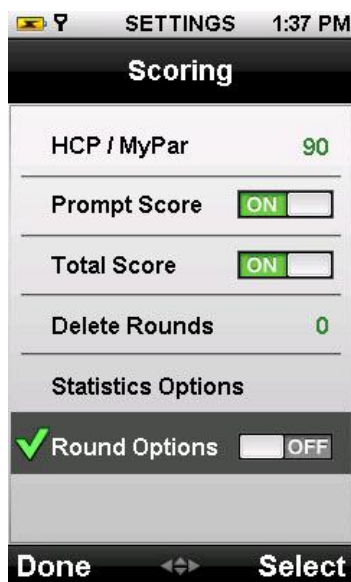

- 3 Scroll down to Round Options and turn it "On" by selecting with the Right Key. Once on, the Round Options menu item will have "ON" next to it, which indicates the SkyCaddie's Digital Scorecard capability is now active. Before each round the BREEZE will ask you if you would like to use the scoring feature for that particular round.





 SCORING 9:25 AM

PAR

4



10

HCP

4

Over / Under

HOLE	PAR	SCORE	HOLE	PAR	SCORE
1	4	+1	10	4	+1
2	5	E	11	4	
3	4	E	12	3	
4	4	+1	13	4	
5	3	E	14	5	
6	5	E	15	4	
7	3	+1	16	4	
8	4	E	17	3	
9	4	E	18	5	

Front +3 | Total +4 | Back +1

Exit



Next

Oak Tree Golf Links													
HOLE	1	2	3	4	5	6	7	8	9	IN	TOTAL		
HCP	8	10	12	16	14	2	18	6	4				
PAR	4	5	4	4	3	5	3	4	4	36	72		
SCORE	5	5	4	5	3	5	4	4	4	39			
HOLE	10	11	12	13	14	15	16	17	18	OUT	TOTAL		
HCP	7	5	17	9	1	13	11	15	3				
PAR	4	4	3	4	5	4	4	3	5	36	72		
SCORE	5												

3.7.2 Using the Scoring Feature During Play

Maintaining your score with the Digital Scorecard is a manual process. In other words, you need to manually input your scores to the SkyCaddie after you play each hole. The SkyCaddie does not automatically track your scores but will automatically prompt you to enter them after each hole played.

At the end of each hole, with scoring enabled, your SkyCaddie will ask for the number of shots it took to complete the hole. You can enter your total score for each hole by moving the Joystick left or right on the Scorecard screen (the score by default begins with par). When you are finished, simply choose “Play” using the Right Key to continue to the next hole.

1:26 PM

Hole 1

Enter Using Joystick

Score ◀ 4 ▶

Putts -

Fairway

☒
☐
☐
☐

Card ◀▶ Play

1:29 PM

Hole 1

Enter Using Joystick

Score 4

Putts ◀ 2 ▶

Fairway

☒
☐
☐
☐

Card ◀▶ Play

1:29 PM

Hole 1

Enter Using Joystick

Score 4

Putts 2

Missed Fairway Right

☒
☐
☐
☒

Card ◀▶ Play

If you want to track additional stats including Putts and Fairways Hit, select the hole using the Joystick. To enter additional stats:

- 1 Scroll down to Putts on the score entry screen. Move the Joystick left or right to adjust the number of Putts. No putts will be recorded until you scroll to highlight "Putts". When you highlight "Putts", it will default to 2.
- 2 Move downward again, then left/right to select whether your shot hit the fairway or missed it (i.e. missed left or missed right).
- 3 Press the Right Key under "Play" when finished.

The BREEZE will display a summary of how many holes have been played to that point in your round, how much over or under par you are, your total score, and number of putts. To do this you will need to turn show totals "On" in the Settings Menu. You have one of two options:

- 1 Press the Left Key under "Back" to return to the scorecard to choose edit to edit your score for that hole

— Or —
- 2 Press the Right Key under "OK" to proceed to the next hole.

If you want scoring ON but do not want to be automatically prompted to enter a score between every hole, you have to option to turn Prompt Scoring OFF. By default, Prompt Score will be turned ON. To change Prompt Score settings:

- 1 From the Main Menu, highlight "Settings" and choose "OK" with the Right Key
- 2 Scroll to "Scoring" and choose "OK" with the Right Key to open it.
- 3 Within "Scoring", scroll to "Prompt Score" and choose "Select" with the Right Key.
- 4 Choose "Yes" or "No" to turn on or off prompt score.

When Prompt Score is turned off, the BREEZE offers two ways to enter a score:



- 1 Press the Menu button to display the Mini-Menu. The Mini-Menu contains a list of frequently used options. Scroll to "Scorecard" and choose "Select" with the Right Key to open the Scorecard. Choose "Edit" with the Left Key to enter your score.

— Or —
- 2 Simply turn the BREEZE to the left to view the Scorecard in Landscape View. Choose "Edit" with the Right Key to enter your score. Landscape View must be turned on in order to use this option.

Edit Scorecard


You can also edit your Digital Scorecard during or after your round on your SkyCaddie. Simply highlight the hole you want to edit from the Scorecard Summary page and use the Joystick to select. You will then be prompted to edit the score.

3.7.3 Viewing the Digital Scorecard

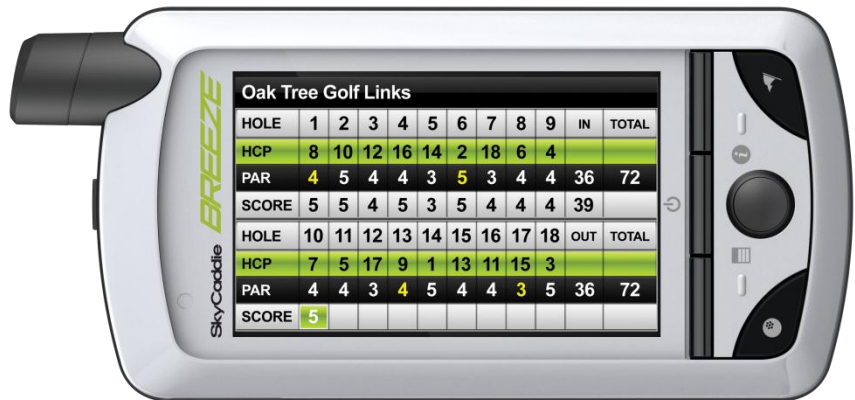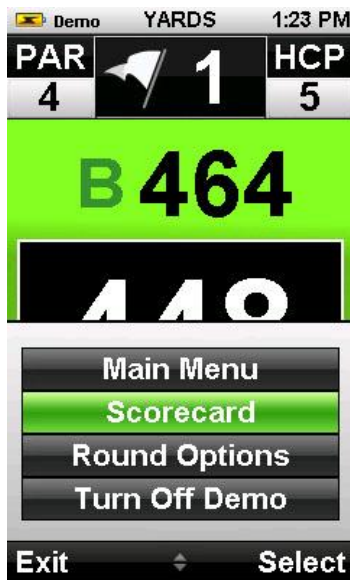

You may view your entire Digital Scorecard on your BREEZE during play by pressing the Menu Button to display the Mini-Menu and selecting the “Scorecard” option or if Landscape View is on, rotate the BREEZE to the left. The Scorecard shows you the established Pars and Handicaps for each hole, plus the scores you entered as you completed each hole. From this screen you can:

- 1 Use the Joystick to highlight the hole you are interested in viewing
- 2 Select “Edit” by pressing the Left Key to edit your score, or
- 3 Select the center soft key to see the Over/Under Summary

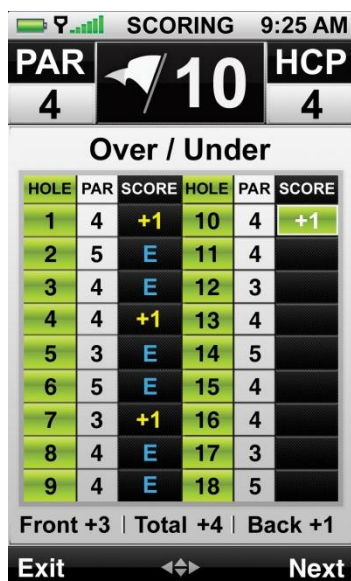

The Over/Under Summary screen tracks your performance against the pars for each hole. A negative number represents strokes under par; a positive number represents strokes over par. An “E” displays if you complete a hole at par.



When you are finished viewing this screen, you can select “Exit” and continue with your round.

3.7.4 Setting Your Handicap or MyPar™ Target

You can adjust the Digital Scorecard to factor in your Handicap or MyPar Target for the course you’re playing. A MyPar Target is the target score for a particular golf course that you want to achieve in order to improve your game.

To Customize Your Handicap or MyPar Target From the Main Menu:

- 1 Scroll to and select “Settings” at the bottom center of the Main Menu.
- 2 Scroll to “Scoring” and choose “OK” with the Right Key to open it.
- 3 With Scoring turned on, scroll to HCP / My Par and choose “Select” with the Right Key.
- 4 Choose which you prefer the BREEZE to use: Handicap or MyPar.
- 5 If you want to use Handicap, make sure “Select HCP” is highlighted and a selection dial is displayed. With the Joystick, slide up or down to adjust to your Handicap value and choose “OK” with the Right Key.
- 6 If you prefer to use MyPar, slide your finger to the right with the Joystick to highlight “MyPar”. Adjust the value to your target score. Remember, the MyPar value corresponds to the target score for the particular golf course you are about to play. When you have selected your target score, press the Right Key under “OK”.

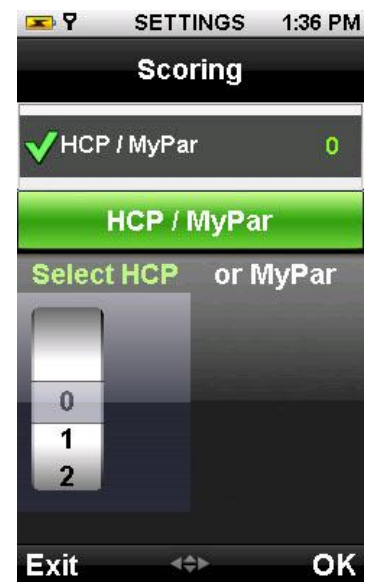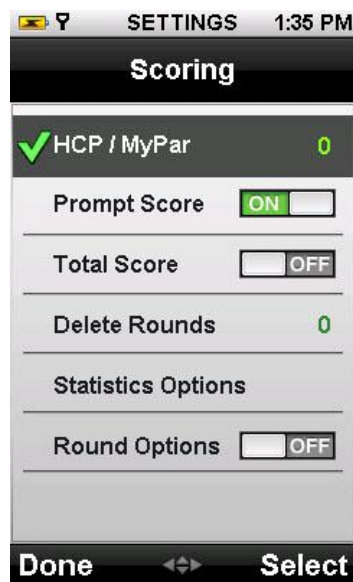

3.7.5 Optional Scoring Information

If you are using the Digital Scorecard to score your round, you can track Total Score, Putts, Fairways Hit and Tee Shot Distance.

By default, all of these stats will be ON. However, you can choose to track Putts, Fairways Hit and Tee Shot Distance (Total Score will always be ON when Scoring is ON).


To Turn OFF The Optional Scoring (Statistics) Information:

- 1 From the Menu Men scroll to “Settings” and choose “OK” with the Right Key
- 2 Scroll to “Scoring” and choose “OK” with the Right Key
- 3 Scroll to “Statistics Options” and choose “OK” with the Right Key to view the options.
- 4 Select the stat(s) you want to turn OFF and choose “Select” with the Right Key.
- 5 After you have made your desired selection, choose “Done” to save your settings.

To Record The Tee Shot Distance:

- 1 Press the Mark Ball button as you stand next to your ball when you are in the Tee Box
- 2 Press “Mark” in the Mark Ball confirmation screen and take shot
- 3 When you arrive to the new location of your tee shot, press the Mark Ball button again and select “Mark” in the confirmation screen
- 4 The distance will be saved and the BREEZE will start measuring a new distance

Note: You will not be notified that the distance was saved. When you sync your BREEZE, the Tee Shot Distance will automatically upload to ClubSG™.

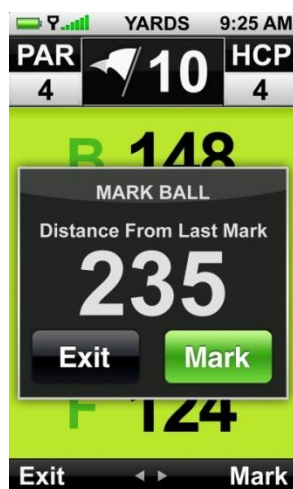

3.7.6 Reviewing Saved Rounds

The BREEZE will store 20 rounds for you to review, edit or delete directly on the device.

To Edit or Delete Rounds on the BREEZE

- 1 From the Main Menu, scroll to and highlight “Scoring and Stats” and choose “OK” with the Right Key to open it. The number of rounds saved out of 20 will appear at the top of the display.



- 2 Scroll through the listing of saved rounds to highlight the round to open.
- 3 If you prefer to delete the round, simply choose “Delete” with the Center Key. Otherwise, choose “View” with the Right Key to view the desired round.
- 4 The scorecard for that round will appear. Choose “Edit” with the Left Key to adjust your score and stats.

3.8 AutoView Technology

AutoView is designed to provide golfers with a hands-free way of switching between multiple play screens with just a simple turn of the wrist. AutoView is controlled by the BREEZE’s built-in accelerometer to provide three viewing positions – one “portrait position” and two additional “landscape positions”.

The default view in a portrait position includes the Par, Hole Number, Handicap and your distances on the current hole: Front, Center and Back. When you rotate the device to the right (clockwise), you will see the distance to the center of the green displayed in Jumbo View. If you rotate the device to the left (counter clockwise), you can access the Digital Scorecard. To view your main information screen again, rotate the device to a portrait position. By default, AutoView is turned “On” for the BREEZE.




To Change Your AutoView Settings:

- 1 From the Main Menu, scroll to “Settings” and press the Right Key to select it.
- 2 Highlight “Options” and choose “OK” with the Right Key.
- 3 Highlight “Landscape View” and choose “Select” with the Right Key.
- 4 Choose either YES or NO to enable or disable Landscape View.

You can also adjust the sensitivity of AutoView. This controls the level of rotation needed to trigger the accelerometer to switch between portrait and landscape positions. By default, the sensitivity is set to medium.

To Adjust the AutoView Sensitivity:

- 1 From the Main Menu, select “Settings”
- 2 Scroll to “System” and choose “OK” with the Right Key to open it.
- 3 Scroll to “AutoView Sensitivity” and choose “Select” to open it.
- 4 Highlight the desired sensitivity and select “OK” with the Right Key.

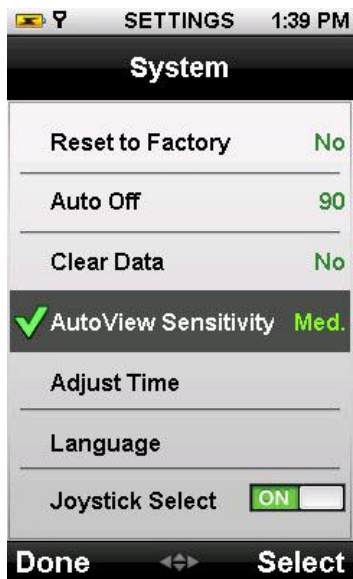

Note

It's OK to rotate the SkyCaddie with AutoView; however, to maintain optimal GPS accuracy, the device needs to be oriented at a 45° or 90° angle. After you obtain your distance information or enter/check your scorecard, please rotate the device back to a vertical position. The SkyCaddie will revert back to the vertical position automatically after a short period of time. This is to remind you that the SkyCaddie must be upright for optimal GPS accuracy. (see Appendix A "Helpful Hints" for more tips).

4.0 SkyCaddie Menu Items

4.1 Main Menu

- **Play Golf:** To begin a round of golf using your BREEZE, highlight “Play Golf” and choose “OK” with the Right Key to open it. Upon opening Play Golf, the BREEZE will display the “Searching for Satellites” screen and begin acquiring satellite signals. To cancel the satellite search and return to the Main Menu, press the Left Key under “Exit”.

When satellite signals are acquired, the BREEZE will attempt to determine your location and with the Auto Select feature open the closest installed course. You may choose to select a course manually by using the Joystick to scroll through the list of courses. Upon selecting a course, choose the hole to begin on and choose “OK” to begin.


- **Courses:** To quickly view a listing of all courses installed on your BREEZE, access the Preloaded Course and search for Nearby Courses, scroll to the Courses menu item and choose “OK” with the Right Key to open it. The course list, along with detailed information about each course, will appear. Using the Joystick, move up or down the listing to view each course.
- **Resume:** Upon exiting a course during play, highlight and select *Resume* to return to that course.



Play Golf on Main Menu



Courses on Main Menu

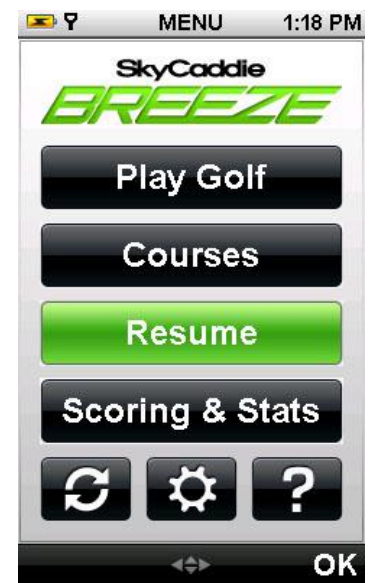

Resume on Main Menu


- **Scoring and Stats:** View and edit saved rounds.
- **Settings:** Takes you to a menu that includes a number of options, settings and information used to customize your BREEZE to best fit your needs.
- **Help:** Selecting this option provides help screens on how to use many of the Advanced Features.



Scoring & Stats on Main Menu



Settings on Main Menu

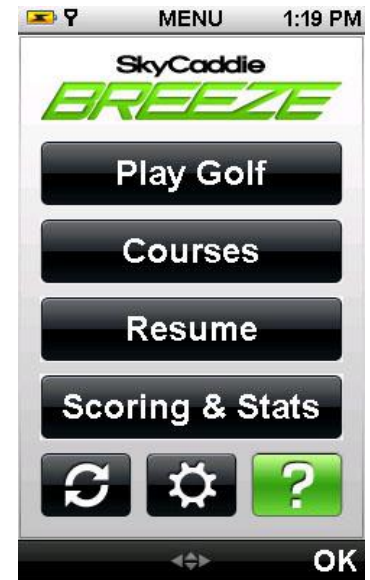

Help on Main Menu

4.2 Settings Menu

The Settings Menu is accessible from the Main Menu. From the Main Menu, use the Joystick to scroll to the Settings icon located at the bottom of the screen. Once highlighted, choose “OK” using the Right Key to access the menu.





4.2.1 Options

Options is a list of settings that you can adjust to fit your style of play. Within Options, use the Joystick to move up and down the list to highlight the desired item. A checkmark will appear next to the item that is highlighted. Choose “Select” with the Right Key to modify a setting option.



- **Distance:** Set the desired distance of measure as Yards, Meters, Miles, or Kilometers.





- **Landscape View:** Select this item to turn AutoView ON or OFF.

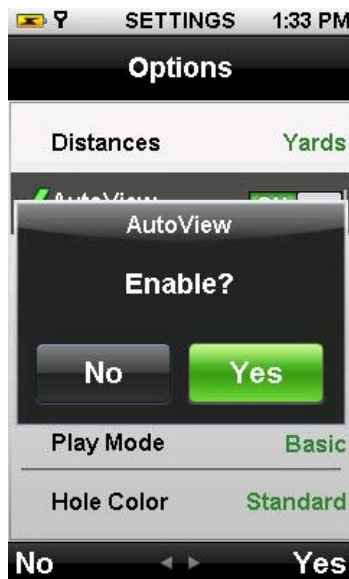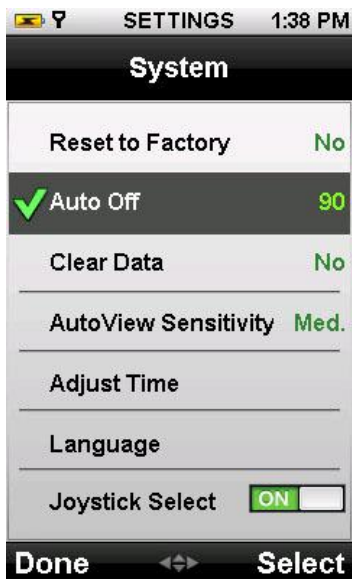

- **Backlight:** Adjust the brightness level of the backlight as needed. To adjust the Backlight percentage level, scroll to Backlight and choose “Select”. Then scroll up/down through the options from 0% to 100% and choose “OK” to save your selection. The Backlight default is 60%. It is recommended to keep the setting at that level to maximize battery life on a single charge.

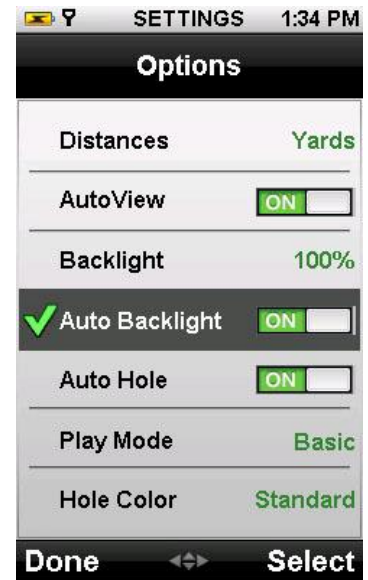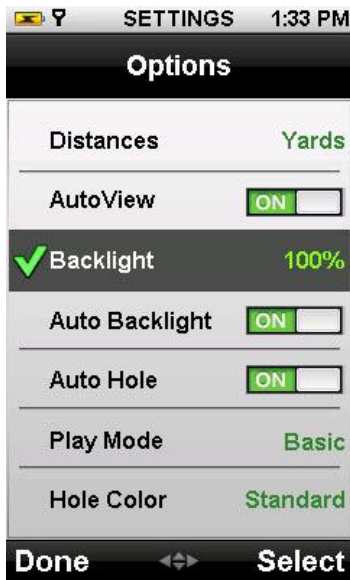

- **Power Save:** By default, Power Save is enabled. Power Save is designed to maximize the battery life on a single charge during a round. With Power Save on, the backlight will turn off after periods of inactivity. When the backlight turns off, the display will dim slightly. To turn the backlight back on, simply move the Joystick or press any button (except the Power button). Although not recommended, Power Save can be disabled within Options.
- **Auto Hole:** Enable the Auto Hole feature to automatically advance to the next hole during play. To turn ON Auto Hole, scroll to the menu item to highlight it. Choose “Select” with the Right Key to open the option. Choose YES or NO to enable or disable the feature.
- **Play Mode:** Play Mode offers two options, Basic or Advanced. The default setting is Basic Mode, but you can still turn on other advanced features manually.

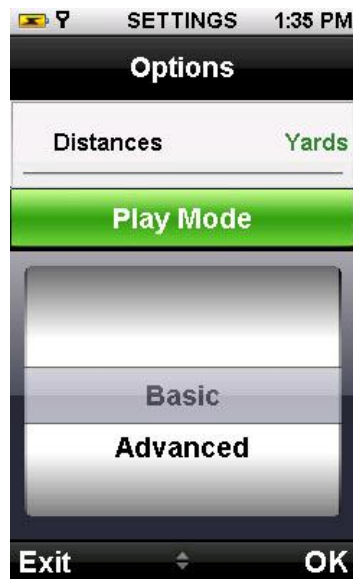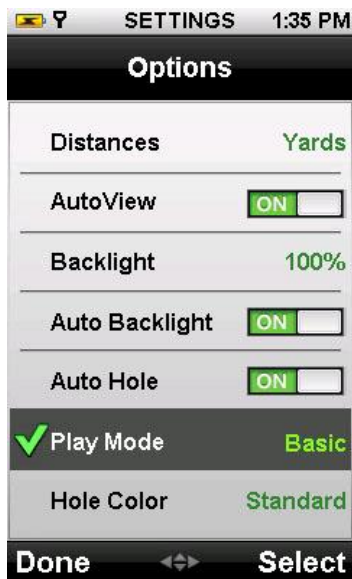

- **Hole Color:** Toggles between a high contrast color theme and a low color contrast theme. The high contrast theme is typically used by most players, as it is easier to read in direct sunlight.

4.2.2 Info

The Info option contains information related to your Membership and ID/Version of your BREEZE. Membership detail includes: SkyCaddie Membership Plan, Serial Number, and Number of Courses currently stored on your BREEZE. The ID/Version screen includes your name, SkyCaddie's customer support phone number, the BREEZE's unique Serial Number and all applicable software versions currently installed.



4.2.3 Scoring

The Scoring functions are customized through this menu. Set your Handicap or MyPar™ goal and configure which statistics to capture during a round (Putts, Fairway Hit and Tee Shot Distance). For more information on these settings, see Section 3.6.

4.2.4 System

System Settings offers additional configuration specific to the operation of the BREEZE.

- **Reset to Factory:** Resets the BREEZE settings to the factory defaults. All preference settings data will be erased when “Yes” is selected and this action cannot be undone.
- **Auto Off:** Set the interval of time to automatically power off your SkyCaddie after no activity. Intervals are 30/60/90 minutes or “Never”. Within System, scroll to “Auto Off” and choose “Select” to open the setting. Using the Joystick, scroll up or down to the desired time interval and choose “OK” with the Right Key to save your selection.
- **Clear Data:** Erases Courses, Scoring and Membership data attached to the BREEZE. If you clear the data, you will need to sync your BREEZE to restore your membership details on the device.
- **AutoView Sensitivity:** Adjust the sensitivity of AutoView. This controls the level of rotation needed to trigger the accelerometer to switch between portrait and landscape positions. By default, the sensitivity is set to medium.
- **Adjust Time:** Once the BREEZE acquires satellite signal, the time can be adjusted using this menu option.
- **Language:** Set your desired language to view screens and menu items in that language.

4.2.5 GPS

Selecting the GPS icon within Settings will open the GPS Reset screen. The reset option will reset the GPS receiver. This function may be used while troubleshooting with SkyGolf Customer Support or if you notice that your satellite signal appears to be poor. Press the Right Key under “Yes” to proceed with the reset, or the Left Key under “No” to exit without a reset.



4.2.6 Test

Should you encounter any issues with the BREEZE, a SkyGolf Customer Support representative may ask you to run the Test tool. The Test tool will automatically perform three tests: a LCD Test, a Backlight Test, and a Button Test.

The LCD Test determines whether the BREEZE's high-resolution TFT-LCD display has dead pixels, a blank screen, or other problems. The test will cause the screen to display all black, then all white.

- The Backlight Test checks the display's backlight by automatically scrolling through different brightness levels in 10% increments.
- The Button Test determines whether the BREEZE software recognizes keys when you press them. During this test, every button you press should show the name of that key on the display. To exit this test, press the Left Key twice.

4.2.7 About Advanced Feature Courses

Advanced Feature, ground-mapped SkyCourses are available only to SkyCaddie Members through Feature Pack Upgrades. These courses unlock the full potential of your BREEZE by displaying not only basic green information, but distances to hazards, carries and layups as well. Any feature on a golf course that comes into play or is typically marked is called a Target. When a SkyCaddie Mapper walked the course you are on, he identified and recorded several tee, fairway and green targets per hole that you would want to know the distance to, in order to choose the best club for your shot. Almost all Advanced Feature course maps include IntelliGreen and distances to hazards, carries, and layups. With this information, you will have everything you need to play your best golf! See Section 5 for more information on the BREEZE Advanced Course Feature Packs.

Feature Pack 1

Patented IntelliGreen Technology


IntelliGreen displays the exact shape of the green from your angle of approach to turn every shot into a scoring opportunity. Get front carry and back distances, depth of green, and distances to any other point on the green — simultaneously.

IntelliGreen Pro Technology


IntelliGreen Pro adds distances to major contours and false fronts. By simply moving the IntelliGreen crosshairs to the ridge lines, you'll get instant distances and depth information to major tiers. Not all greens and not all courses have noteworthy major green contours to require this feature.

Target Lists


The Target List displays a list of distances to hazards, carries and layups located ahead from your position on the hole. You may use the Joystick to scroll through the targets manually, or let the BREEZE automatically update the list of targets as you move down the fairway. The Target List also calculates and displays the 'Leaves' distance to the Green Center from the highlighted target.

Feature Pack 2

Interactive HoleVue w/ Patented Auto Zoom


With an eagle's view of the entire hole, you'll get the distances you need to avoid hazards and play smart golf from tee to green. Measure to any point on the hole whether you can see what's ahead or not.

QuickVue Powered by TrueGround Mapping


QuickVue provides a virtual preview of the hole shape from tee to green. At a glance, golfers know the exact green shape, total distance from tee to green and the ideal fairway landing distance.

Feature Pack 3

Dynamic RangeVue for HoleVue


Dynamic RangeVue for HoleVue provides multiple yardage arcs that overlay fairway landing areas to allow you to avoid trouble and select the ideal location for your next shot.

Dynamic RangeVue for IntelliGreen Pro


Dynamic RangeVue for IntelliGreen provides multiple yardage arcs that overlay an eagle's eye view of the green allowing you to shoot for the safe zones and limit three putts.

PinPoint Technology


Simply add pin sheet positions and enjoy the advantages of the best GPS. Get distances to the hole without the hassles and limitations of aiming a laser.

5.0 BREEZE Feature Packs – Raise Your Game to Another Level

5.1 Overview of Advanced Course Management Features

Raise your game to another level with SkyCaddie's advanced course management features at any time with a BREEZE feature upgrade pack. BREEZE feature upgrade packages are available at SkyGolf.com after registration.

5.2 BREEZE Feature Pack 1

5.2.1 BREEZE Feature Pack 1 Includes

5.2.1.1 Target Lists



Target Lists – Feature Pack 1

The BREEZE with Feature Pack 1 installed offers several target view options to represent key distance information in a variety of ways. Enable the target views that best fit your style of play. By default, all Target Views will be turned OFF.

Your BREEZE with Feature Pack 1 installed will automatically display targets in front of you during play. You can always manually scroll back to targets behind you if needed (by scrolling the Joystick up or down). In addition to automatically scrolling targets, you can customize how your BREEZE displays targets:

Target view: options available to display during play include: HoleVue (Interactive HoleVue with Zoom), IntelliGreen (IntelliGreen or IntelliGreen Pro), Target List (Hazards, Carries and Layups), Big Number and Center Only. The default is to display HoleVue and IntelliGreen for each hole. However, you can combine the options to best fit your style of play.

Using the Joystick, scroll through each option and choose “Select” with the Right Key to either turn ON or OFF the desired option(s). If a target view is set to display, “ON” will appear to the left of it in the listing of views. To return to the main Targets menu, choose “Done”.

- **Green At:** Automatically switches to the IntelliGreen view when you reach a set distance. The default to switch to IntelliGreen is 150 yards. You may adjust this setting from 50-500 yards.
- **Green Ref:** Sets the green target that you want to know the distance to when you make your approach shot. When the Green Reference is set to “Front”, a small square will appear on the IntelliGreen where the front is marked. The word “Front” replaces “Center” on target lists. The distance will be based on the Front marker.
- **Green Targets:** Enable this option to display additional green targets (Example: Grn-RtCy, Grn-BackRt) in the target list views.
- **Targets First:** Enabling this setting displays the target list from the tee first when you go to the next hole (instead of displaying the IntelliGreen). The default setting is to display the IntelliGreen first.

To change the Target View setting:

- 1 From the Main Menu, highlight the “Settings” icon. Choose “OK” with the Right Soft key to select it.
- 2 Under Settings, scroll to “Targets” and choose “OK” to open it.
- 3 Using the Joystick, highlight “Target Views” (a checkmark will appear to the left when highlighted) and choose “Select” with the Right Key to display Target View options.
- 4 To enable or disable a particular Target View option, choose “Select” with the Right Key. Pressing the Right Key will toggle the target view selection on/off.
- 5 When finished, press the Left Key beneath “Done” to return to the previous screen.

Target List (Hazards, Carries and Layups): The Target List displays a list of distances to hazards, carries and layups located ahead from your position on the hole. You may use the Joystick to scroll up or down through the targets manually, or let the BREEZE automatically update the list of targets ahead, as you move down the fairway. The Target List also calculates and displays the “Leaves” distance to the Center of Green from the highlighted target.

If you marked your previous shot using the Mark button, the distance from that last mark (labeled “Last Mark”) will be displayed in the center of the Target List screen.

5.2.1.2 Patented IntelliGreen® Technology




SkyGolf's proprietary IntelliGreen Technology is available in Feature Pack 1 and graphically displays the true shape of the green, automatically rotating it to match your angle of approach. It turns every shot into a scoring opportunity by providing front carry and back distances, depth of green, and distances to any other point on the green — *simultaneously*.

The front carry, a point on the green (determined by the position of the crosshair) and back distance are displayed along the top of the screen. Each distance corresponds to a unique icon that is displayed on the green shape for quick reference.

This view also includes the automatic depth of the green and the distance from your last mark, if you used the Mark Ball feature on the hole. Green depth is an automatic calculation of the depth of the green for your line of approach. The last mark measures, displays and updates the distance of your shots as you advance down the course toward your ball. (See section "Determining Shot Distance" for more instructions on marking your shots.)

While viewing the IntelliGreen screen, select "View" with the Left Key to see another target view. Continuing to select "View" will return you to the IntelliGreen view.

5.2.1.3 IntelliGreen® Pro

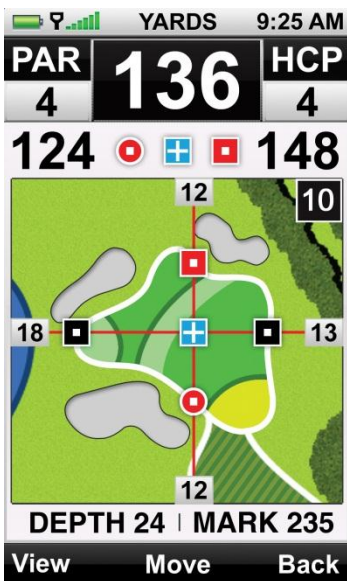

Built on proven IntelliGreen technology, IntelliGreen Pro is included with Feature Pack 1 and offers all of the functionality of IntelliGreen, plus the ability to display major tiers, contours, false fronts and mounds from your angle of approach to the green. The IntelliGreen crosshairs can be moved to the ridge lines on the image of the green to get instant distances and depth information to major tiers. This kind of crucial scoring information is only possible by precision-mapping a golf course from the ground.

If an Advanced Feature Course map has an IntelliGreen Pro feature and you have added Feature Pack 1, this version of IntelliGreen will be used by the BREEZE.

5.3 BREEZE Feature Pack 2

5.3.1 BREEZE Feature Pack 2 Includes

5.3.1.1 Interactive HoleVue™ With Patented Auto Zoom



HoleVue is available with Feature Pack 2 and offers a ground-rectified graphic of every golf hole. With HoleVue, you'll see the ideal line of play for that hole, real-time distances for the tee shot and approach shot, plus you can re-position the line of play to know the distance to any point on a hole in order to play with fewer strokes. Additionally, HoleVue includes a patented zoom function to dial into the exact area you need to see.

Know Your Location: Indicated by a red "X", XMark™ displays your actual position on HoleVue, automatically updating as you move. Powered by SkyGolf's proprietary TruePoint™ GPS Precision Positioning Technology, XMark always shows where you are in relation to hole features that affect play – even if you can't see them!

To See Distances to Any Point on the Hole (Par 4s and 5s only): XTarget™ is a feature of Interactive HoleVue With Zoom that allows you to create a personal fairway targets. With XTarget, you'll get the distance you need to any target, layup or safe area on a hole, and from that target to the center of the green. Knowing this critical distance information will help you save strokes by staying in the smart zones and getting out of trouble areas.

Creating a personal fairway target with XTarget:

The line of play (yellow line) will indicate the distance between your location and the center of the green. Use the Joystick to drag the target down from the green to any where on the hole, including layup targets. The distance from your location to the target and the remaining distance to the green will instantly appear. Move the target to your desired position.

To Zoom In or Out: Selecting "Zoom" above the Right Key allows you to zoom three levels of the HoleVue graphic. The first level of zoom provides a closer look at the fairway, the second level shows a closer view of the hazards that will affect your approach shot, and the third level zooms directly to IntelliGreen. Press the Right Key to get back to HoleVue. Holding down the Right Key under "Zoom" will reverse the zoom one level at a time.

- **Tracking Shot Distance Within HoleVue:** Using the Mark Ball button, mark your location prior to taking your tee shot. Once marked, the SkyCaddie will display the total yards of the hole at the top of the display. Additionally, the distance from your last mark will automatically update as you advance down the fairway.
- **Recording Distance Off the Tee:** You can use the BREEZE to store your driving distance. Press the Mark Ball button before your tee shot and again when you arrive at the location where your tee shot ended up (make sure to press "Mark" in the confirmation screen). Next time you SYNC your BREEZE with CaddieSync Express the driving distance will upload automatically with the scorecard to your ClubSG™ account.

Note

On Par 3s, you will not be able to create a custom target and the HoleVue the image will display without a yellow line.

Tip

The target cursor on HoleVue™ and IntelliGreen® screens is locked by default. To unlock the cursor on those screens, simply press the Center Key (Power button). Once unlocked, use the Joystick to move the cursor target to the desired location and release. Press the Joystick like a button or the Center Key again to lock the target cursor in place.

5.3.1.2 QuickVue™



QuickVue, part of Feature Pack 2, shows the safest path from the tee to green and displays hazards and reliable targets that will come into play as you move down the course. The hazards and targets update automatically as you move down the course.

Identify the Hazards: QuickVue indicates hazards and targets by the following:

- Red squares = tee shot targets
- White squares = hazards
- Blue squares = water
- Tall green rectangles = trees

Knowing the Numbers: The “Tee Shot” distance plus the “Leaves” distance provides the total distance from the tee box to the green following the safe path down the fairway. The “Center” distance is the linear distance (a straight line) from the tee box to the center of the green. If you add up the “Tee Shot” distance and the “Leaves” distance, it will not be the same as “Center” distance because they are displaying the distance to the green following two different paths to the green.

QuickVue will display on courses where HoleVue is not available. For the BREEZE, QuickVue is turned “ON” by default with Feature Pack 2 and can be viewed on courses not currently mapped with HoleVue.

To Toggle QuickVue On or Off

1. Go to “Menu” then select “Settings”
2. Under “Settings”, highlight “Targets” and select
3. Highlight “QuickVue” and select to toggle ON/OFF

If a course has both HoleVue and QuickVue, HoleVue will display instead of QuickVue. To view QuickVue instead of HoleVue:

1. Make sure QuickVue is set to ON (see above)
2. Under “Targets”, highlight “Target Views” and select
3. Highlight “HoleVue” and select. The black dot next to “HoleVue” will disappear and it will be turned off

5.4 BREEZE Feature Pack 3

5.4.1 BREEZE Feature Pack 3 Includes

5.4.1.1 Dynamic RangeVue™

Available with Feature Pack 3, RangeVue displays preset yardage arcs on the HoleVue and IntelliGreen screens and adjust dynamically over fairway landing areas and over greens to allow you to select the best club for every shot much more quickly. RangeVue™ provides more information, faster and more reliably than any laser rangefinder without aiming or requiring line of sight. By default, RangeVue is on. To toggle RangeVue on/off, press the Info key.




HoleVue with RangeVue



IntelliGreen Pro with RangeVue

5.4.1.2 PinPoint™ Technology

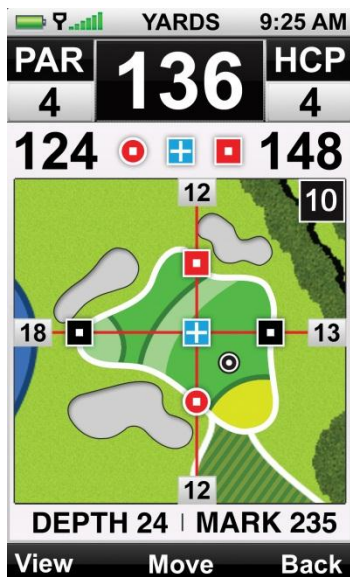

Also part of Feature Pack 3, PinPoint Technology eliminates the need for aiming and missing with lasers trying to get hole positions. SkyCaddie's PinPoint allows you to manually input pin and zone sheets prior to your round for any course with IntelliGreen Pro. You may also download PinPoint hole Locations from SkyGolf's course library by syncing your device for the latest mapping data. Courses that have PinPoint Locations entered will download to your SkyCaddie so that you can select them prior to your round.

PinPoint combined with SkyCaddie's patented IntelliGreen®, provides the yardages you need to the front carry, back, center and hole-location — automatically from your line of approach. You'll hit more greens, have more birdie putts and avoid greenside hazards, even if you can't see them.

Note: Requires access to pin sheets or green zones; not offered at all courses. See SkyGolf.com for PinPoint feature availability.

6.0 Recording Your Own Course

The SkyCaddie BREEZE allows you to record three green targets (Front, Center, and Back per hole) for up to five personal courses that are stored on your device. If you have purchased a SkyCaddie Membership Plan, you can backup and store courses in your own online membership account using CaddieSync Express under Your Courses.

6.1 Naming Personal SkyCaddie Courses

To record a course, select Courses from the Menu screen then scroll up to New Course and select “OK”. If scoring is on, you will be prompted to make a selection. It does not matter if you select scoring or not.

Create a name for your course (up to 16 characters) using the on-screen keyboard using the Joystick to move and to select. To clear a letter, highlight and select the “Backwards” key (bottom right above “Enter” key). If you select “OK” (Right Key) or select the “Enter” key before choosing any letters, the course name will default to “MYCOURSE#” and sequentially add a number for each course.

6.2 Recording Green Targets

After entering the course name, highlight and select “Enter” or use the Right Key to select “OK” to save and to advance to the “Start On” screen showing the hole spinner. Scroll to the desired hole to record and select “OK”.

You are now ready to record the distance. Press the Right Key to record your location and you will be prompted to stand still for 5 seconds while the SkyCaddie records the location. Repeat this process for each of the green targets. The location will default to the Center of the green, however, the recommended sequence to record targets is to record the front of the green, record the back of the green, then walk to the center of the green and, when the two distances are equal, record that location.

6.3 Setting Par and Handicap

To set the par and handicap for a recorded hole, press the Info button (you must be in Record Mode to set the Par and Handicap). Move the Joystick to set the par and Handicap (HCP) to the desired number. You can also edit the course name or delete the course. Use the Joystick to select.

We recommend setting the Par and Handicap on each hole after you record the distance information.

6.4 Playing Personal SkyCaddie Courses

To play a personal SkyCaddie course, press the Menu button and select “Courses”. Scroll to the appropriate course name and select. Next, scroll UP/DOWN to select the desired hole number and press the Joystick to select.

6.5 Re-Recording Personal SkyCaddie Courses

Press the Menu button and select “Courses”. Scroll to the appropriate course to re-record and select “OK”. scroll UP/DOWN to select the desired hole number and press the Joystick to select. Select “Mode” (Left Key) then press “Record” in the Record Mode confirmation box. Repeat steps outlined in Section 5.2 (“Recording Green Targets”).

New locations will overlay previously recorded locations for those holes selected. The entire course does not have to be re-recorded.

Record Mode

Before you can record or re-record any distance information, set or change par, modify the course name, or delete a course you must have a satellite fix.

Changing Modes

You change between Record Mode and Play Mode at any time by selecting Mode using the Left Key.

6.6 Renaming or Deleting Personal SkyCaddie Courses

To rename or delete a personal SkyCaddie course, press the Menu button and select “Courses”. Scroll to the appropriate course name to rename or delete and select. Press “Ok” and choose the starting hole number from the hole spinner. Select “Mode” (Left Key) and select “Record” in the confirmation box to switch to Record Mode. After you are in Record Mode, press the Info button (“i” icon). From here you will be able to edit the name of the course and/or delete it. Use the Joystick to select. When you are finished, select “Save” (Right Key) to save the changes.

7.0 APPENDIX A - Helpful Hints

- **DO** turn the BREEZE on outside, away from buildings and other obstructions. The device will need to warm up approximately 5-10 minutes prior to play. For optimal performance while playing, ensure that the BREEZE has a clear view of the sky at all times. While the omni-directional, high-performance GPS antenna has been designed to lock quickly to more satellites and stay locked to maintain performance in all terrains, it is still a good idea to avoid being around buildings, obstructions, heavy foliage, low areas with adjacent obstructions, or reflective objects (such as metal/glass structures) while using the BREEZE.
- **DO** sync your BREEZE regularly. Syncing regularly allows the BREEZE to keep running at peak performance. Syncing allows you to check alerts for new features and software updates; automatically upload your latest scorecard to ClubSG; and download new courses and change your Favorites list.
- **DO** perform a Soft Reset if the BREEZE appears to be unresponsive. To reset the BREEZE, press and hold the Center Key and the Thumb Pad simultaneously for 8 seconds until the BREEZE powers off. Then press the Center Key to power it back on.
- **DO** watch your signal strength indicator. The higher the signal strength, the more accurate the system will be. The best signal strength is obtained in open areas, with the antenna pointing toward the sky at a 45° to 90° angle. Holding the BREEZE away from your body may improve signal strength in weak areas. It is normal for the satellite signal strength indicator to fluctuate as you move around the golf course.
- **DO** make sure the battery is fully-charged before play.
- **DO NOT** use AC chargers or USB cables that did not come with or are not authorized for use with your BREEZE. The wrong adapters or cables may damage the BREEZE.
- **DO NOT** turn the BREEZE on and off during play. The BREEZE is a “smart system” that continues to download data from satellites to adjust to your environment during play. It is designed to stay on continuously during a round of golf. Turning it on and off will interrupt satellite communication and slow down play. If you take a long break at the turn, you may turn the SkyCaddie off to conserve battery power, but allow 5-10 minutes for it to return to optimal accuracy.
- **DO NOT** make any sudden or jerking movements with the BREEZE.
- **DO NOT** expose your BREEZE to extreme temperatures. Treat it like you would your cell phone. Do not leave your BREEZE in a super-heated vehicle when not in use.
- **DO NOT** drop the BREEZE in water or leave exposed in a hard rain. The BREEZE is water-resistant but NOT waterproof!

8.0 Appendix B - Target Icons and Target Descriptors

8.1 Target Icons

	Back of Green		Zone
	Center of Green		Lay Up To
	Front of Green		Fairway Target
	Green		End of Fairway
	Bunker Right Carry		Bunker
	Bunker Right		Bunker in Fairway
	Bunker Left Carry		Bunker Left
	Hazard		Marker
	Ditch		Water Carry
	Mound		Water



To



Upslope



Downslope



Leaves



Creek



Out of Bounds



Tree



Pro Front

8.2 Target Descriptors

Target Name	Target Description
Green	Gn
Plate	Plt
Fairway Target.	FT
End of Fairway	EoF
Fairway	Fwy
Bunker Right	BkrRt
Bunker Left	BkrLt
Bunker	Bkr
Carry	Cy
Creek	Crk
Mound	Mnd
UpSlope	UpSlp
DownSlope	DnSlp
Tee	T
PopUp	PU
Ball Washer	Bwash
Bottom	Btm
Disc	Dsc
Leaves	Lv
Last	Lst
Point	Pnt
Pond	Pnd
Path	Pth
Bush	Bsh
Range	Rng
Hole	Hle
Marsh	Mrsh

Target Name	Target Description
Sprinkler	Sp
Water Cooler	Wtrcolr
Water	Wtr
Bridge	Brdg
Post	Pst
Over	Ovr
Island	Isld
Flag	Flg
White	Wht
Black	Blk
Orange	Orng
Yellow	Ylw
Gold	Gld
False	Flse
Pole	Pol
Sign	Sgn
LayUpTo	LayUp
Dogleg	DogLg
Target	Trgt
Stone	Stn
Front	Frnt
Left	Lt
Right	Rt
Center	Ctr
Middle	Ctr
Marker	Mkr

9.0 Appendix C - Battery Information and Safety Requirements

NOTE: Failure to comply with all of the following precautions could

- Cause personal injury or property damage
- Cause abnormal chemical reactions which would make the battery over heat, smoke, distort, leak, explode, or catch on fire
- Destroy internal protections built into the battery
- Shorten battery life
- Reduce battery performance

- **Read this manual completely before using your BREEZE.**
- The BREEZE battery has been rigorously tested, and is in fully in compliance with applicable UN, ITC, IATA, and other regulatory requirements for batteries of this type.
- The BREEZE with battery installed has been further tested and is in full compliance with MIL-STD 810F standards for surviving high and low air pressure environments; storage and operation at extremes of temperature and humidity; rapid changes in temperature; extended periods of vibration; repeated drops onto a hard surface on each side, edge, and corner; blowing dust and sand; and drenching, torrential rain.
- The BREEZE battery life will be maximized if it is recharged at a moderate temperature, between 32°F and 104°F (0°C to 40°C).
- The BREEZE operates normally between 14°F and 140°F (-10°C to 60°C).
- The BREEZE battery will safely survive temperatures between -40°F to 167°F (-40°C to 75°C). Avoid allowing the temperature of the BREEZE or its battery to exceed 167°F / 75°C.
- Use only a SkyGolf-supplied charger with your BREEZE.
- Do not leave your BREEZE attached to a charger or a USB port for over 24 hours. Under the recommended conditions, a completely discharged BREEZE battery should completely re-charge in about 4 to 4.5 hours when on the charging screen.
- Do not charge the BREEZE in a place where it could become over heated by direct sunlight, a stove, a fire, or other source of extreme heat.
- CAUTION: Do not replace the BREEZE battery with an incorrect battery type.
- Keep the BREEZE away from sources of high voltage or static discharge.
- If your BREEZE will be stored for an extended period, allow the battery to discharge to approximately one half capacity before storage.
- Store the BREEZE in a place where it will not experience temperatures or absolute humidity over 85%.
- Do not put the BREEZE into a microwave oven.
- Do not allow the BREEZE to be crushed.
- Do not incinerate or burn an BREEZE.
- Do not leave an BREEZE where it could become submerged in water.
- If your BREEZE is over heating, leaking, smoking, or if you detect an unusual odor, do not touch it. Using the end of the USB cable away from the BREEZE, immediately disconnect the cable from any charger or USB port.
- Do not touch a leaking BREEZE. Avoid leaked-out materials. Do not allow these materials to touch your skin or clothes. If touched, immediately rinse affected areas thoroughly with water. Leaked materials may cause skin irritation. Seek medical attention if irritation persists. If leaked material contacts your eyes, do not rub your eyes. Rinse the eyes thoroughly with water, and see a doctor immediately.
- Opening the SkyCaddie will void your warranty.

- If you were to open an BREEZE, you would have access to a Lithium Ion battery. Do not open the BREEZE, do not handle the BREEZE battery.
- If you have access to an BREEZE battery, always follow these precautions in addition to all the above:
- Read this entire manual and the label on the exterior of the battery.
- Keep the battery away from sources of excessive heat such as fire, stoves, or direct sunlight.
- Keep the battery away from sources of high voltage or static discharge.
- Do not use or store the battery with other batteries or where it could touch metal.
- Do not put the battery into a microwave oven.
- Do not allow the battery to be crushed.
- Keep the battery away from children.
- Do not drop the battery.
- Do not allow anything to touch any of the battery contacts, or to connect two or more of the contacts.
- Do not disassemble, destroy, or attempt reassembly of the battery.
- Do not place or leave the battery in a damp or wet environment.
- Do not allow water to touch the battery.
- Do not wrap the battery with conductive material.
- Properly dispose of the battery.
- Do not incinerate or burn the battery.
- Do not leave or discard the battery where it could get wet or become submerged in water.
- Do not damage the battery.
- Do not weld or solder anything to the battery, the attached wires, or the connector.
- Do not use this battery in any device other than a SkyCaddie.
- Do not touch a leaking battery. Avoid leaked-out materials. Do not allow it to touch your skin or clothes. If touched, immediately rinse affected areas thoroughly with water. Leaked materials may cause skin irritation. Seek medical attention if irritation persists. If it contacts your eyes, do not rub your eyes. Rinse the eyes thoroughly with water, and see a doctor immediately.
- Use of this battery in other devices could result in unsafe conditions. Do not use this battery in any device other than your SkyCaddie.

U.S. Federal Communications Commission Regulatory Agency Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interferences received, including interference that may cause undesired operation.

NOTICE: The FCC warns that user modifications of this device without the express approval of SkyHawke Technologies could void the user's authority to operate this device.

Canadian Regulatory Agency Compliance

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the interference causing equipment standard entitled: "Digital Apparatus", ICES-003 of Industry Canada

©2012-13 SkyHawke Technologies, LLC.

All rights reserved. SkyGolf®, SkyCaddie®, Breeze™, Simplest Rangefinder in Golf™, SkyRewards™, AGT™, Advanced Golfer Technology™, #1 Rangefinder in Golf™, IntelliGreen®, PinPoint™, HoleVue™, RangeVue™, QuickVue™, ClubSG™, TrueGround™, and TruePoint GPS™ are trademarks of SkyHawke Technologies, LLC. All other trademarks and copyrights are the property of their respective owners.

U.S. Patent No. 7,118,498; 6,456,938; 5,740,077, 5,507,485 & Patent Pending

For product terms and conditions, please visit <http://www.skygolf.com>

SkyCaddie® User's Guide. All content within is copyrighted by SkyHawke Technologies, LLC and may not be reprinted without permission. The content of this guide is furnished for informational use only, is subject to change without notice, and should not be construed as a commitment by SkyHawke Technologies, LLC. SkyHawke assumes no responsibility or liability for any errors or inaccuracies that may appear in the informational content contained in this guide.

Register your Breeze at www.SkyGolf.com using CaddieSync Express within 30 days of purchase to activate your Consumer Limited Warranty and complementary 30-Day Course Preload Trial.

Questions? Visit us on the web at www.skygolf.com